



## HP Cluster Configuration Support Matrix For Microsoft Windows Server 2003, EE and non-HP Storage

Config	Supported Servers*	Server Software	Host\\ Bus Adapters (HBAs)*	Multi Path Software	Storage Information	Interconnects (Switches)	Other
#1 Windows Server 2003, EE	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>• DL380 G5</li> <li>• DL380 G4, DL380 G3</li> <li>• DL385 G2, DL385</li> <li>• DL580 G4, DL580 G3, DL580 G2</li> <li>• DL585 G2, DL585 G1</li> <li>• DL740</li> <li>• BL460c</li> <li>• BL465c</li> <li>• BL480c</li> <li>• BL680c</li> <li>• BL685c</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p>	<p><a href="#">SmartStart Ver: 8.0</a> (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)</p>	<p><b>Qlogic QLA2462</b> Driver: STOR Miniport 9.1.4.15 Firmware: 4.00.26 Bios: 1.24</p> <p><b>QLA2342</b> Driver: STOR Miniport 9.1.4.15 Firmware: 3.03.21 Bios: 1.52</p> <p><b>QMH2462</b> Driver: STOR Miniport 9.1.3.16 Firmware: 4.00.70 Bios: 1.26</p> <p><b>Emulex LightPulse LP9002</b> Driver: STORport Miniport 5.1.30.9 Firmware: 3.93a0 Bios: 2.00a1</p> <p><b>Emulex LightPulse LP9002</b> Driver: STORport Miniport 5.1.30.9 Firmware: 3.93a0 Bios: 1.70a3</p> <p><b>LPe1105-HP</b> Driver: STORport Miniport 5.1.20.7 Firmware: 2.50A8 Bios: 6.00a1</p> <p><a href="#">LP9002L</a></p> <p><b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1</p> <p><a href="#">LP9002DC</a></p> <p><b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1</p> <p><a href="#">LP952L</a></p> <p><b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1</p> <p><b>*Note 1:</b> HBAs must be used homogeneously within a cluster; but can be mixed if they are from the same HBA family as identified above.</p>	<p><a href="#">3PAR MPIO for Microsoft Windows release</a> <b>Version:</b> 1.0.17</p>	<p><a href="#">3PAR InServ Storage Server Family (InServ S400 and S800 and E200)</a> <b>Firmware version:</b> InForm OS 2.2</p>	<p><a href="#">Brocade SilkWorm 3250</a> <b>Firmware version:</b> 4.22</p> <p><a href="#">Brocade SilkWorm 3850</a> <b>Firmware version:</b> 4.22</p> <p><a href="#">Brocade SilkWorm 3900</a> <b>Firmware version:</b> 4.22</p> <p><a href="#">Brocade SilkWorm 4100</a> <b>Firmware Version:</b> 4.4.0c</p>	February 2008

<p>#2 Windows Server 2003, x64</p>	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>DL380 G5</li> <li>DL380 G4</li> <li>DL380 G3</li> <li>DL385 G2</li> <li>DL385</li> <li>DL580 G4</li> <li>DL580 G3</li> <li>DL580 G2</li> <li>DL585 G2</li> <li>DL585 G1</li> <li>DL740</li> <li>BL460c</li> <li>BL465c</li> <li>BL480c</li> <li>BL680c</li> <li>BL685c</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p>	<p><a href="#">SmartStart Ver: 8.0</a> (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)</p>	<p><b>Qlogic QLA2462</b> Driver: STOR Miniport 9.1.4.15 Firmware: 4.00.26 Bios: 1.24</p> <p><b>QLA2342</b> Driver: STOR Miniport 9.1.4.15 Firmware: 3.03.21 Bios: 1.52</p> <p><b>QMH2462</b> Driver: STOR Miniport 9.1.3.16 Firmware: 4.00.85 Bios: 1.26</p> <p><b>Emulex LightPulse LP9002</b> Driver: STORport Miniport 7.1.30.9 Firmware: 3.93a0 Bios: 2.00a1</p> <p><b>Emulex LightPulse LPe1105-HP</b> Driver: STORport Miniport 7.1.30.9 Firmware: 2.70a5 Bios: 6.00a2</p> <p><b>Emulex LightPulse LPe1105-HP</b> Driver: STORport Miniport 7.1.30.9 Firmware: 2.50a8 Bios: 6.00a2</p> <p><a href="#">LP9002L</a></p> <p><b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1</p> <p><a href="#">LP9002DC</a></p> <p><b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1</p> <p><a href="#">LP952L</a></p> <p><b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1</p> <p><b>*Note 1:</b> HBAs must be used homogeneously within a cluster; but can be mixed if they are from the same HBA family as identified above.</p>	<p><a href="#">3PAR MPIO for Microsoft Windows release</a> <b>Version:</b> 1.0.17</p>	<p><a href="#">3PAR InServ Storage Server Family (InServ S400 and S800 and E200)</a> <b>Firmware version:</b> InForm OS 2.2</p>	<p><a href="#">Brocade SilkWorm 3250</a> <b>Firmware version:</b> 4.22</p> <p><a href="#">Brocade SilkWorm 3850</a> <b>Firmware version:</b> 4.22</p> <p><a href="#">Brocade SilkWorm 3900</a> <b>Firmware version:</b> 4.22</p> <p><a href="#">Brocade SilkWorm 4100</a> <b>Firmware Version:</b> 4.4.0c</p>	<p>February 2008</p>
--	---	---	---	---	---	---	----------------------

<p>#1 Windows Server 2003, x64</p>	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>DL380 G5</li> <li>DL380 G4, DL380 G3</li> <li>DL385 G2, DL385</li> <li>DL580 G4, DL580 G3, DL580 G2</li> <li>DL585 G2, DL585 G1</li> <li>DL740</li> <li>BL460c</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p>	<p><a href="#">SmartStart Ver: 7.1</a> (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)</p>	<p><a href="#">LP9002L</a></p> <p><b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1</p> <p><a href="#">LP9002DC</a></p> <p><b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1</p> <p><a href="#">LP952L</a></p> <p><b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1</p> <p><b>*Note 1:</b> HBAs must be used homogeneously within a cluster; but can be mixed if they are from the same HBA family as identified above.</p>	<p><a href="#">3PAR MPIO for Microsoft Windows release</a> <b>Version:</b> 1.0.14</p>	<p><a href="#">3PAR InServ Storage Server Family (InServ S400 and S800 and E200)</a> <b>Firmware version:</b> InForm OS 2.2</p>	<p><a href="#">Brocade SilkWorm 3250</a> <b>Firmware version:</b> 4.22</p> <p><a href="#">Brocade SilkWorm 3850</a> <b>Firmware version:</b> 4.22</p> <p><a href="#">Brocade SilkWorm 3900</a> <b>Firmware version:</b> 4.22</p> <p><a href="#">Brocade SilkWorm 4100</a> Firmware Version: 4.4.0c</p>	<p>February 2007</p>
<p>#2 Windows Server 2003, EE</p>	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>DL380 G5</li> <li>DL380 G4, DL380 G3</li> <li>DL385 G2, DL385</li> <li>DL580 G4, DL580 G3, DL580 G2</li> <li>DL585 G2, DL585 G1</li> <li>DL740</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p>	<p><a href="#">SmartStart Ver: 7.1</a> (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)</p>	<p><a href="#">LP9002L</a></p> <p><b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1</p> <p><a href="#">LP9002DC</a></p> <p><b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1</p> <p><a href="#">LP952L</a></p> <p><b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1</p> <p><b>*Note 1:</b> HBAs must be used homogeneously within a cluster; but can be mixed if they are from the same HBA family as identified above.</p>	<p><a href="#">3PAR MPIO for Microsoft Windows release</a> <b>Version:</b> 1.0.14</p>	<p><a href="#">3PAR InServ Storage Server Family (InServ S400 and S800 and E200)</a> <b>Firmware version:</b> InForm OS 2.2</p>	<p><a href="#">Brocade SilkWorm 3250</a> <b>Firmware version:</b> 4.22</p> <p><a href="#">Brocade SilkWorm 3850</a> <b>Firmware version:</b> 4.22</p> <p><a href="#">Brocade SilkWorm 3900</a> <b>Firmware version:</b> 4.22</p> <p><a href="#">Brocade SilkWorm 4100</a> Firmware Version: 4.4.0c</p>	<p>February 2007</p>
<p>#3 Windows Server 2003, EE</p>	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>DL580 G3</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p>	<p><a href="#">SmartStart Ver: 7.6</a> (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)</p>	<p><a href="#">LP10000 DC</a></p> <p><b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1</p>	<p><a href="#">EMC PowerPath</a> Version: 4.0</p>	<p><a href="#">EMC DMX Symmetrix</a></p>	<p><a href="#">McDATA 6064</a></p>	<p>February 2007</p>
<p>#4 Windows Server 2003, x64</p>	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>DL585</li> <li>DL380 G4</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously</p>	<p><a href="#">SmartStart Ver: 7.6</a> (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)</p>	<p><a href="#">LP9802 DC</a></p> <p><b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1</p> <p><a href="#">LP9002DC</a></p> <p><b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1</p>	<p><a href="#">IBM SUBSYSTEM DEVICE DRIVER (SDD)</a> <b>Version:</b> 2.1.0.0-2</p>	<p><a href="#">IBM TotalStorage ESS Model 800</a> <b>Firmware version:</b> 2.4.3</p>	<p><a href="#">McData6064 Switches</a></p>	

	or heterogeneous within a cluster.						October 2006
#5 Windows Server 2003, EE	Max supported nodes = 8  ProLiant <ul style="list-style-type: none"> <li>DL740</li> <li>DL585</li> <li>DL380 G4, DL380 G3, DL380 G2</li> <li>DL570</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p>	<a href="#">SmartStart Ver: 7.6</a> (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)	<a href="#">LP9802 DC</a>  <b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1  <a href="#">LP9002DC</a>  <b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1	<a href="#">IBM SUBSYSTEM DEVICE DRIVER (SDD)</a> <b>Version:</b> 2.1.0.0-2	<a href="#">IBM TotalStorage ESS Model 800</a> <b>Firmware version:</b> 2.4.3	<a href="#">McData6064</a>	October 2006
#6 Windows Advanced Server 2003	Max supported nodes = 8  ProLiant <ul style="list-style-type: none"> <li>DL580 G2</li> <li>DL580 G3</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p>	<a href="#">SmartStart Ver: 7.6</a> (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)	<a href="#">FCA2214 SCSIport Driver:</a> 9.1.3.11 <b>FW:</b> NA <b>BIOS:</b> 1.45  <b>StorPort Driver:</b> 9.1.3.16 <b>FW:</b> NA <b>BIOS:</b> 1.45  <a href="#">LP9802 DC</a>  <b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1	<a href="#">IBM SUBSYSTEM DEVICE DRIVER (SDD)</a> <b>Version:</b> 2.1.0.0-2	<a href="#">IBM TotalStorage ESS Model 800</a> <b>Firmware version:</b> 2.4.3	<a href="#">FC9000</a>	July 2006
#7 Windows Server Enterprise, 2003	Max supported nodes = 8  ProLiant <ul style="list-style-type: none"> <li>DL380 G4, DL380 G3, DL580 G2, DL740</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p>	<a href="#">SmartStart Ver: 7.6</a> (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)	<a href="#">LP9002L</a>  <b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1  <a href="#">LP9002DC</a>  <b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1  <a href="#">LP952L</a>  <b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1  <b>*Note 1:</b> HBAs must be used homogeneously within a cluster; but can be mixed if they are from the same HBA family as identified above.	<a href="#">3PAR MPIO for Microsoft Windows release</a> <b>Version:</b> 1.0.14	<a href="#">3PAR InServ Storage Server Family (InServ S400 and S800)</a> <b>Firmware version:</b> InForm OS 2.1	<a href="#">Brocade SilkWorm 3250</a> <b>Firmware version:</b> 4.22  <a href="#">Brocade SilkWorm 3850</a> <b>Firmware version:</b> 4.22  <a href="#">Brocade SilkWorm 3900</a> <b>Firmware version:</b> 4.22  <a href="#">Brocade SilkWorm 4100</a> <b>Firmware Version:</b> 4.4.0c	March 2006
#8 Windows Advanced Server 2000	Max supported nodes = 8  ProLiant <ul style="list-style-type: none"> <li>DL580</li> <li>DL760</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p>	<a href="#">SmartStart Ver: 7.6</a> (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)	<a href="#">LP9802 DC</a>  <b>Driver:</b> 5-5.10a10 <b>FW:</b> 3.92a2 <b>BIOS:</b> 1.70a1	<a href="#">Veritas MPIO</a>	<a href="#">Veritas Dynamic Multipathing (DMP) for HP Arrays (XP)</a>	<a href="#">Brocade Switches</a>	March 2006

<p>#9</p> <p>Windows Server 2003, EE</p>	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>DL385</li> <li>DL360 G4, DL360 G3</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p>	<p><a href="#">SmartStart</a> Ver: 7.6 (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)</p>	<p><a href="#">LP9802 DC</a></p> <p>Driver: 5-5.10a10 FW: 3.92a2 BIOS: 1.70a1</p>	<p><a href="#">EMC PowerPath</a> Version: 4.41</p>	<p><a href="#">EMC Clarion CX700</a> Firmware version: 2.07.700.5.010</p>	<p><a href="#">Cisco MDS9509</a></p>	<p>March 2006</p>
<p>#10</p> <p>Windows Server 2003, EE</p>	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>DL380 G4, DL380 G3</li> <li>DL580 G2</li> <li>DL740</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p>	<p><a href="#">SmartStart</a> Ver: 7.1 (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)</p>	<p><a href="#">LP9002L</a></p> <p>Driver: 5-5.10a10 FW: 3.92a2 BIOS: 1.70a1</p> <p><a href="#">LP9002DC</a></p> <p>Driver: 5-5.10a10 FW: 3.92a2 BIOS: 1.70a1</p> <p><a href="#">LP952L</a></p> <p>Driver: 5-5.10a10 FW: 3.92a2 BIOS: 1.70a1</p> <p><b>*Note 1:</b> HBAs must be used homogeneously within a cluster; but can be mixed if they are from the same HBA family as identified above.</p>	<p><a href="#">3PAR MPIO for Microsoft Windows release</a> Version: 1.0.13</p> <p><a href="#">3PAR MPIO for Microsoft Windows release</a> Version: 1.0.10</p>	<p><a href="#">3PAR InServ Storage Server Family (InServ S400 and S800)</a> Firmware version: InForm OS 2.2</p>	<p><a href="#">Brocade SilkWorm 3250</a> Firmware version: 4.22</p> <p><a href="#">Brocade SilkWorm 3850</a> Firmware version: 4.22</p> <p><a href="#">Brocade SilkWorm 3900</a> Firmware version: 4.22</p> <p><a href="#">Brocade SilkWorm 4100</a> Firmware Version: 4.4.0c</p>	<p>August 2005</p>
<p>#11</p> <p>Windows Server 2003, EE</p>	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>DL380 G4, DL380 G3</li> <li>DL580 G2</li> <li>DL740</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p>	<p><a href="#">SmartStart</a> Ver: 7.1 (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)</p>	<p><a href="#">LP9002L</a></p> <p>Driver: 5-5.10a10 FW: 3.92a2 BIOS: 1.70a1</p> <p><a href="#">LP9002DC</a></p> <p>Driver: 5-5.10a10 FW: 3.92a2 BIOS: 1.70a1</p> <p><a href="#">LP952L</a></p> <p>Driver: 5-5.10a10 FW: 3.92a2 BIOS: 1.70a1</p> <p><b>*Note 1:</b> HBAs must be used homogeneously within a cluster; but can be mixed if they are from the same HBA family as identified above.</p>	<p><a href="#">3PAR MPIO for Microsoft Windows release</a> Version: 1.0.10</p>	<p><a href="#">3PAR InServ Storage Server Family (InServ S400 and S800)</a> Firmware version: InForm OS 2.1</p>	<p><a href="#">Brocade SilkWorm 3250</a> Firmware version: 4.22</p> <p><a href="#">Brocade SilkWorm 3850</a> Firmware version: 4.22</p> <p><a href="#">Brocade SilkWorm 3900</a> Firmware version: 4.22</p> <p><a href="#">Brocade SilkWorm 4100</a> Firmware Version: 4.4.0c</p>	<p>May 2005</p>

<p>#12</p> <p>Windows Server 2003, EE</p> <p>Service Pack 1</p>	<p>Max supported nodes = 5</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>DL560</li> </ul>	<p><a href="#">SmartStart</a> Ver: 7.3 (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)</p>	<p><a href="#">Emulex LP9802</a></p> <p>Driver: 5.30a2 FW: 1.91a1 BIOS: 1.07a3</p> <p><a href="#">Emulex LP9002L</a></p> <p>Driver: 5.30a2 FW: 3.93a0 BIOS: 1.70a3</p> <p><b>*Note:</b> HBAs must be used homogeneously within a cluster.</p>	<p><a href="#">IBM SUBSYSTEM DEVICE DRIVER (SDD)</a> Version: 1.5.1.3</p>	<p><a href="#">IBM TotalStorage ESS Model 800</a> Firmware version: 2.4.3.35</p>	<p><a href="#">Cisco 9509</a> Firmware version: 2.1.(1a)</p> <p><a href="#">Cisco 9216</a> Firmware version: 2.1.(1a)</p> <p><a href="#">Brocade SilkWorm 3900</a> Firmware version: 4.2.0C</p>	<p>August 2005</p>
<p>#13</p> <p>Windows Server 2003, EE</p> <p>Service Pack 1</p>	<p>Max supported nodes = 8</p> <p>ProLiant DL360 G4</p>	<p><a href="#">SmartStart</a> Ver: 7.3 (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)</p>	<p><a href="#">QLogic 2340</a></p> <p>Driver: 9.0.1.17 BIOS: 1.43</p>	<p><a href="#">IBM SUBSYSTEM DEVICE DRIVER (SDD)</a> Version: 2.1.0.0-2</p>	<p><a href="#">IBM TotalStorage ESS Model 800</a> Firmware version: 2.4.3</p>	<p><a href="#">IBM TotalStorage SAN Switches 2109 F16</a> Firmware version: 3.2.0d</p> <p><a href="#">IBM TotalStorage SAN Switches 2109 F32</a> Firmware version: 4.4.0b</p>	<p>July 2005</p>
<p>#14</p> <p>Windows Server 2003, EE</p>	<p>Max supported nodes = 5</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>DL360 G4, DL360 G3</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p>	<p><a href="#">SmartStart</a> Ver: 7.1 (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)</p>	<p><a href="#">Emulex LP9802</a></p> <p>Driver: 5.2.22a8 FW: 3.92a2 BIOS: 1.70a1</p>	<p><a href="#">EMC PowerPath</a> Version: 3.0.6</p>	<p><a href="#">EMC Clariion CX600</a> Firmware version: 2.05 1.60.5.009</p>	<p><a href="#">Cisco 9509</a> Firmware version: 1.4.(4b)</p> <p><a href="#">Cisco 9216</a> Firmware version: 1.4.(4b)</p> <p><a href="#">Brocade SilkWorm 3900</a> Firmware version: 4.2.0C</p>	<p>February 2005</p>
<p>#15</p> <p>Windows Server 2003, EE</p>	<p>Max supported nodes = 5</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>DL360 G4, DL360 G3</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p>	<p><a href="#">SmartStart</a> Ver: 7.1 (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)</p>	<p><a href="#">Emulex LP9802</a></p> <p>Driver: 5.2.22a8 FW: 3.92a2 BIOS: 1.70a1</p>	<p><a href="#">EMC PowerPath</a> Version: 3.0.6</p>	<p><a href="#">EMC Clariion CX700</a> Firmware version: 2.07.700.5.010</p>	<p><a href="#">Cisco 9509</a> Firmware version: 1.4.(4b)</p> <p><a href="#">Cisco 9216</a> Firmware version: 1.4.(4b)</p> <p><a href="#">Brocade SilkWorm 3900</a> Firmware version: 4.2.0C</p>	<p>February 2005</p>
<p>#16</p> <p>Windows Server 2003, EE</p>	<p>Max supported nodes = 8</p> <p>ProLiant DL360 G4</p>	<p><a href="#">SmartStart</a> Ver: 7.3 (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)</p>	<p><a href="#">QLogic 2340</a></p> <p>Driver: 9.0.1.17 BIOS: 1.43</p>	<p><a href="#">EMC PowerPath</a> Version: 4.3.1</p>	<p><a href="#">EMC Clariion CX700</a> Firmware version: 2.16.700.5.010</p>	<p><a href="#">IBM TotalStorage SAN Switches 2109 F16</a> Firmware version: 3.2.0d</p> <p><a href="#">IBM TotalStorage SAN Switches 2109 F32</a> Firmware version: 4.4.0b</p>	<p>July 2005</p>

<p>#17 Windows Server 2003, EE</p>	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>DL360 G4, DL360 G3, DL360 G2, DL360</li> <li>DL380 G4, DL380 G2, DL380</li> <li>DL560</li> <li>DL740</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p>	<p><a href="#">SmartStart</a> <b>Ver:</b> 7.1 (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.1)</p>	<p><a href="#">Emulex LP9002L</a> <b>Driver:</b> 2.21a8 <b>FW:</b> 3.91a3 <b>BIOS:</b> n/a</p>	<p><a href="#">Hitachi Dynamic Link Manager</a> <b>Ver:</b> 5.2</p>	<p><a href="#">Hitachi Data Systems Freedom Storage Lightning 9900V</a> <b>Microcode ver:</b> 21-09</p>	<p><a href="#">Brocade SilkWorm 3200</a> <b>Firmware version:</b> 3.1.2a</p> <p><a href="#">Brocade SilkWorm 3800</a> <b>Firmware version:</b> 3.1.2a</p> <p><a href="#">Brocade SilkWorm 3900</a> <b>Firmware version:</b> 4.2a</p>	<p>October 2004</p>
<p>#18 Windows Server 2003, EE</p>	<p>Max supported nodes = 2</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>DL580 G2</li> </ul>	<p><a href="#">SmartStart</a> <b>Ver:</b> 6.4 /7.0 (Install servers using SmartStart 6.4 in an unattended build and then apply PSP 7.0 to update NC7770 NIC drivers)</p>	<p><a href="#">QLogic 2340</a> <b>Driver:</b> 8.2.3.63 <b>BIOS:</b> 1.35</p> <p><b>Driver file:</b> IBM FAST F-2 and FC2-133 Host Bus Adapter device driver version 8.2.3.63 for Microsoft Windows 2000 and Windows Server 2003 (32 Bit)- 26k9110.zip (from the IBM Website)</p> <p><b>Driver Date:</b> 03/10/2003</p>	<p>IBM RDAC controller software</p> <p><b>Ver:</b> 8.40.0035.3</p> <p><b>Filename:</b> rdacdisk.sys SMrdac-WS32-08403503.exe</p>	<p><a href="#">IBM Fast T 700 Storage</a> <b>FW:</b> 05.30.12.00</p> <p><b>Revision:</b> 0520 No special features enabled</p>	<p><a href="#">McData 4500 Sphereon SAN Switches</a></p> <p>McData EFC and SANtegrity</p> <p><b>Software version:</b> EOS v5.2 <b>Microcode Version:</b> 05.02.0013</p> <p><a href="#">Cisco Network Switches</a></p> <p>Cisco Catalyst 3750G-24TS</p> <p><b>ISO Version:</b> 12.1(14)EA1a</p>	<p>April 2004</p>