



BSQUARE's Update Designer

Auto-Logon RDP Session



Prepare the RDP sessions

- ◆ Add 2 RDP sessions to your device
- ◆ Select "*Automatic Logon*" for each
- ◆ Enter *Username/Domain* for each (leave Password blank).
- ◆ Export WBT configuration to a server using the *Export Tab* from the Terminal Properties View.
 - ◆ See Resource Guide for more details

Create RDP password file

- ◆ Open Notepad or a text editor
- ◆ In the text file, write the following information using the format below:

[connection_name1]
“password”

[connection_name2]
“password”

- ◆ Save the File.



Encrypt the RDP password file

- ◆ On the server, run `enc_password.exe`
- ◆ Enter the name of the text file (including extension) into the *Input Filename* field.
- ◆ Browse to the path you want to export the change file to.
 - ◆ Ex. The directory containing the `.bud` file for this update
 - ◆ The filename must be "*password.cfg*"

Adding the RDP password file to the update

- ◆ Open up the .bud file.
- ◆ Drag the *password.cfg* file into the *CopyFiles* window.
- ◆ Give this file a priority of 1.
 - ◆ Make sure that *RebootAfterLevel* is set to a lower priority, thus a higher numerical value.



Update Package Settings

- ◆ The destination for password.cfg is "\Harddisk3\
 - ◆ Make sure *OSImage*, *Register*, *Execute*, and *WaitForExecute* are set to "NO".
- ◆ Increment the PackageID.
- ◆ Drag the .reg file with the connection keys to the Registry icon in the .bud file.



Client Settings

- ◆ On the device, press F2 to open *Terminal Properties*.
- ◆ Click on *Update* tab.
- ◆ Press the *Configure* button.
- ◆ Set the *Boot Preferences*
 - ◆ All Boots
 - ◆ Next Boot

Initiate Update on Client

- ◆ Click on the *CE Update* tab.
- ◆ Enter the location of the .bud file in the *Update URL* field.
 - ◆ http://Your_Server/Your_Path/filename.bud
 - ◆ ftp://Your_Server/Your_Path/filename.bud
 - ◆ <\\yourserver\yourpath\filename.bud>
- ◆ Click *Save*.
- ◆ Click *Update Now*.



Questions?

